

WARRANTY

ONE (1) YEAR LIMITED WARRANTY (Valid for purchase within the USA and Canada ONLY)

This Sensor Soap Dispenser is distributed by iTouchless Housewares & Products, Inc. (iTouchless) with the highest quality components and most advanced technology available. It is warranted to be free from defects in material and workmanship, given normal use and care, for 365 days from the date of the original purchase with proof of purchase within the United States and Canada. We will repair or replace a new unit thereof which fails as the result of such a defect during the warranty period.

This warranty is the customer's exclusive remedy for product defect and does not apply to:

- User Modification
- Attachments to product by user that cause damage
- Any product on which the serial and/or model numbers have been broken, removed, tampered with, defaced or altered in any manner
- Damage caused by abuse, misuse, accident, water or theft
- Physical Damage

Except as stated above, iTouchless makes no express or implied warranties as to any product. In particular, makes no warranty of merchantability or of fitness for any particular purpose. iTouchless shall not be liable for consequential or incidental damages arising from any product defect. Our Liability is limited to the replacement of any defective product. iTouchless expressly disclaims all warranties not set forth in this limited warranty. Any implied warranties that may be imposed by law are limited to the terms of this limited warranty. The Battery Cover and Removable Soap Container are not covered by this warranty.

If the Sensor Soap Dispenser should fail during the warranty period, visit our website at <http://www.Touchless.com> to request a Repair # Before returning to us. Warranty only apply to units that purchased from our authorized dealers. Items sold as used, floor sample or refurbished are sold solely under the terms and conditions of the selling party. iTouchless will not warrant such purchase. We WILL NOT ACCEPT a package that is without the Repair #. Remember to return package **PRECISELY** PREPAID by an insured carrier such as FedEx or UPS and include a check of \$ 9.99 for return postage. Extra \$10.00 will be added to the return postage when requesting repaired item to be shipped to Canada. We will not pay for any return postage fee.

Return Address:
iTouchless Housewares & Products, Inc.
3151 Diablo Avenue, Hayward, CA 94545, USA

Subject to the above conditions, we will repair or ship to you a new Sensor Soap Dispenser within 30 working days after receipt.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state and province to province. For more information, please visit our website at: www.Touchless.com

Thank you for purchasing the iTouchless Sensor Soap Dispenser!
Any Problem? DO NOT RETURN TO STORE. Call 1-800-660-7978 first.

iTouchless®

touch-free Sensor Soap Dispenser 3D

USER MANUAL

iTouchless®

Product Diagram:

Soap Container Cap

LED indicator for soap volume setting
on / off

Infrared sensor range ≈ 3 inches

Removable soap container

Base

One control button for on / off, soap volume
selection

Water resistant battery cover

- To refill, turn the Soap Container Cap counter-clockwise to open.
- To clean the Soap Container, open the Soap Container Cap and pour the remaining soap out. Then hold the bottom of the dispenser and pull the Soap Container out. Wipe clean the Base and make sure there is no excess soap left in the Base. Wash the Soap Container before attaching the container back to the base.



IMPORTANT: If your Sensor Soap Dispenser does not work or you have questions, please contact customer service at 1-800-660-7978 Monday through Friday from 9:30 am to 5:00 pm PST.

DO NOT RETURN THIS ITEM TO THE STORE OR RETAILER WHERE YOU PURCHASED IT

Quick Start Guide

- 1) Remove 2 screws from the battery cover panel. Take the cover off and insert 4 "AA" alkaline batteries into the battery compartment. Make sure the batteries are inserted in the correct direction, which is indicated on the battery compartment. Place battery cover panel back in position, and secure with 2 screws.
- 2) To fill the soap, turn the soap Container Cap counter-clockwise to open. Fill the soap container with liquid soap, anti-bacterial gel, etc. Put the Soap container Cap back on and turn clockwise to lock.
- 3) Press and hold the One Control Button for a few seconds until the LED indicator light flashes blue (indicating that the dispenser is ON)
- 4) To dispense soap, put your hand 3 inches or less beneath the infrared sensor (spout) and hold your hand steady until soap is dispensed.
- 5) To select and switch between the three (3) soap dispensing volume settings, press the One Control Button once. The LED indicator will flash blue twice (this indicates the medium volume setting). Push the Button one more time to change to the maximum volume setting (the LED indicator will flash blue three times). Push the Button one more time to select the low volume setting (the LED indicator will flash once). You can push the Button to change the setting any time.
- 6) To turn off the dispenser, press and hold the One Control Button for a few seconds until the LED indicator turns off.

Note: For the first time, keep dispensing up to 20 times (see step 4) until the soap starts to dispense. The thicker the viscosity of the soap, the longer it will take for the initial dispensing. If the dispenser will not dispense soap after 20 times, try to add some water to the container, or select a lower viscosity soap.

Important:

- Do not overfill the soap container
- Wipe off spilled soap before closing the Soap Container Cap
- Do not wash the dispenser with water. Clean it with a damp cloth and dry immediately with a soft, dry cloth.
- Use only the same brand of Alkaline batteries. Change all the batteries at the same time

206*103MM