

ITEM NO \_\_\_\_\_

PROJECT \_\_\_\_\_

DATE \_\_\_\_\_



RU-300

# CURTIS. The QUALITY name in automatic coffee urns.

Curtis' fully automatic, push-button control coffee urns are preferred by food-service professionals.

Manufactured to the highest quality standards, Curtis urns make brewing large volumes of hot, delicious coffee fast and easy. Time after time. The Curtis urn line boasts a full selection of urn sizes for every need:

**TWIN MODELS** – 3, 6, and 10 Gallons capacities


**SINGLE MODELS** – 3 and 6 Gallon capacities

Handsomely crafted, Curtis urns are constructed of heavy-gauge stainless steel with electrically welded seams. Curtis stands behind every urn with a full two-year warranty against leakage or burnout.


## STANDARD FEATURES

- Automatic Refill During Brew Cycle.
- Thermostatically Controlled for Near-Instant Recovery.
- Closed-Lid Brewing Creates Superior Flavor and Full Coffee Aroma.
- Swing-Spray Head Evenly Saturates Coffee Grounds for Complete Extraction.
- Electric, Gas or Steam Operation.
- Stainless Steel Filter Basket (with hold-down flaps).
- Half-Batch Brew Cycle Standard on RU-600, RU-1000, and RU-225 (optional on smaller urns).
- Automatic Agitator/Aerator.
- Manual Agitator/Aerator.
- Emergency Refill.


## EASY PUSH-BUTTON OPERATION

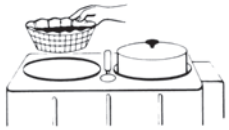

Place paper filter in basket with proper amount of coffee grounds and place basket in coffee liner.



Place swing-spray head over center of basket.



Replace cover lid and push brew button.

## OPTIONAL EXTRAS

- Double Check Valve.
- 220VAC Cord and Plug.
- Marine Package.
- Half Brew Batch on RU-150 and RU-300.
- Double Service.
- Dual Wall Insulated Models.
- Three-Phase Wiring – 3 and 4 Wire plus Ground.
- Curtis CSC15 Water Filter - To control mineral deposits and taste and odor.
- Export Voltage.
- Jug Filler.
- Drip Tray – DT-24 for RU-300; DT-28 for RU-600/RU-1000.
- Low Water Cut Off Thermostat.

## CORRECTIONAL PACKAGE

For hostile environments, Curtis offers a package of security features to guard against damage and tampering.

- Legs Drilled and Tapped for Tie Down.
- Hot Water Ready Indicator, in Lieu of Temperature Gauge.
- Air Agitation Stainless Steel Tubing.
- Hex Configuration on All Faucet Bonnets, Removable by Tools Only.
- Tamperproof Screws on Control Box.
- Thermostat Guard Box, Fitted with Tamperproof Screws.
- Spray Arm NOT Removable without Tools.
- Fixed By-Pass Valve with Set Screw Adjustment.
- Acrylic Gauge Glass.
- Low Temp – No Brew.
- Optional Hinged Lids.



RU-150 — Single 3 Gallon  
Brews up to 13 Gallons Per Hour.



RU-225 — Single 6 Gallon  
Brews up to 15 Gallons Per Hour.

# CURTIS AUTOMATIC URNS ARE RENOWNED FOR THEIR SUPERIOR FEATURES AND LONG LIFE DURABILITY



**RU-300 — Twin 3 Gallon**  
Brews up to 25 Gallons Per Hour

**RU-600 — Twin 6 Gallon**  
Brews up to 36 Gallons Per Hour


**RU-1000 — Twin 10 Gallon**  
Brews up to 40 Gallons Per Hour

## STANDARD FEATURES ON CURTIS AUTOMATIC URNS




RU-300 brews up to 25 gallons per hour. RU-600 brews up to 36 gallons per hour. RU-1000 brews up to 40 gallons per hour.

# STANDARD RU URNS (ELECTRIC)

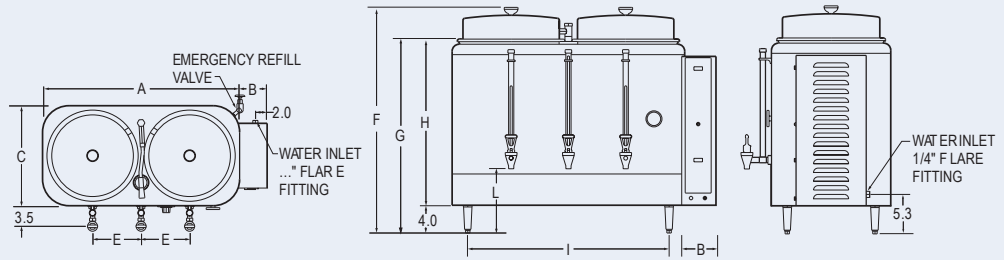

# GAS/STEAM CONNECTION

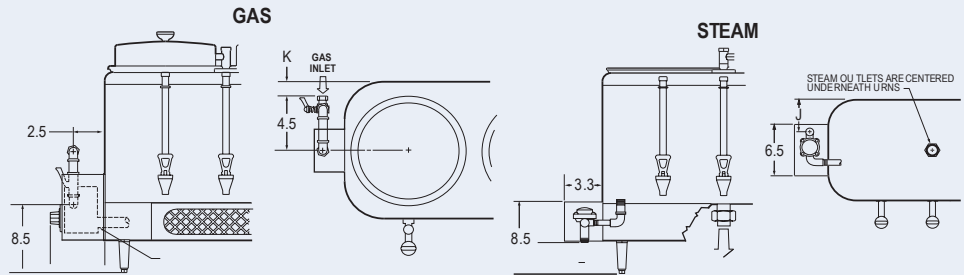

	A*	B	C*	D	E	F	G	H	I	J	K	L	M
RU-300	28"	4.5"	14"	10"	7"	29.25"	25"	21"	23.5"	4.25"	4.25"	9.75"	8.75"
RU-600	33.5"	4.5"	17"	11"	8.25"	32.5"	28"	24"	29"	5.5"	10.25"	10.25"	9.25"
RU-1000	33.5"	4.5"	17"	11"	8.25"	29.5"	35"	31"	29"	5.5"	5.5"	10.25"	9.25"
RU-150	19"	4.75"	16.5"	10"	4.25"	29.25"	25"	21"	14.5"	6.75"	5.5"	9.75"	8.75"
RU-225	19"	4.5"	16.5"	11"	4.25"	32.5"	28"	24"	14.5"	5"	5.5"	10.25"	9.25"

\*For Dual Wall Insulated Models ("DW" Suffix) add 2" to Dimensions "A" & "C"

SPECIFICATIONS	SINGLE URNS		TWIN URNS		
	RU-150	RU-225	RU-300	RU-600	RU-1000
Finished Brew	3 Gallons	6 Gallons	Up to 25 gallons	Up to 36 gallons	Up to 40 gallons
Water jacket	8 Gallons	13 Gallons	13 Gallons	23 Gallons	33 Gallons
Coffee Production/Hr.	Up to 13 Gallons	Up to 15 Gallons	Up to 13 Gallons	Up to 30 Gallons	Up to 30 Gallons
Dimensions (HxWxD)	See Above Chart				
Standard Ratings Available 220VAC/Single Phase * Three Wire Plus Ground (May be used on 208-240V Systems) Specify Voltage and Wattage when ordering	5KW/24A	7KW/33A	6KW/27A 8KW/36A	6KW/27A 8KW/36A 10KW/45A	
220VAC/Three Phase* Three Wire Plus Ground	5.25KW/14A	7.5KW/20A	7.5KW/20A 9KW/24A	10.5KW/28A 15KW/39A	
Gas Heated (Nat. or LP)**	42,000 BTU		62,000 BTU		
Water Inlet	.25" Flare				
Apx. Shipping Weight	80 lbs	95 lbs.	95 lbs.	120 lbs.	170 lbs.
Cube	11.19 cu. ft.	12.49 cu. ft.	12.47 cu. ft.	25.78 cu. ft.	25.95 cu. ft.

\* May Be Used on 208-240V Systems \*\* Due to lower efficiency, GAS heated Urns tend to have slower recover than electric. Connection to a hot water supply can help. Note: Filters are rated for up to 100F only. Steam Heated Models are available in all sizes. Requires 15-50 psi steam pressure; 120VAC/4.5A for controls. Special voltage: 380, 415, 440 and 480 volts available for 3 phase, 3 or 4 wire plus ground.



The Betty Mills Company  
2121 El Camino Real  
Suite D-100  
San Mateo, CA 94403  
800.238.8964  
www.BettyMills.com

